



REMOVE FROM BAG



PLACE ON STABLE GROUND



FULLY EXTEND FRAME



LAY CANOPY ON TOP OF FRAME



ALIGN THE CANOPY TOP OVER THE FRAME CORNERS AND PLACE VELCRO ON 4 CORNERS



MAKE SURE CANOPY IS FLUSH ON THE HARDWARE



LIFT INSIDE POLE IN CENTER TO EXTEND FRAME COMPLETELY



**LIFT 2 ADJACENT OUTER LEGS
SLIDE OUT INNER LEGS UNTIL SNAP
BUTTON LOCKS INTO HOLE**



SPIN WINDER IN CENTER OF THE FRAME TO FULLY TIGHTEN THE TENT